


## Unpack the machine and check the components

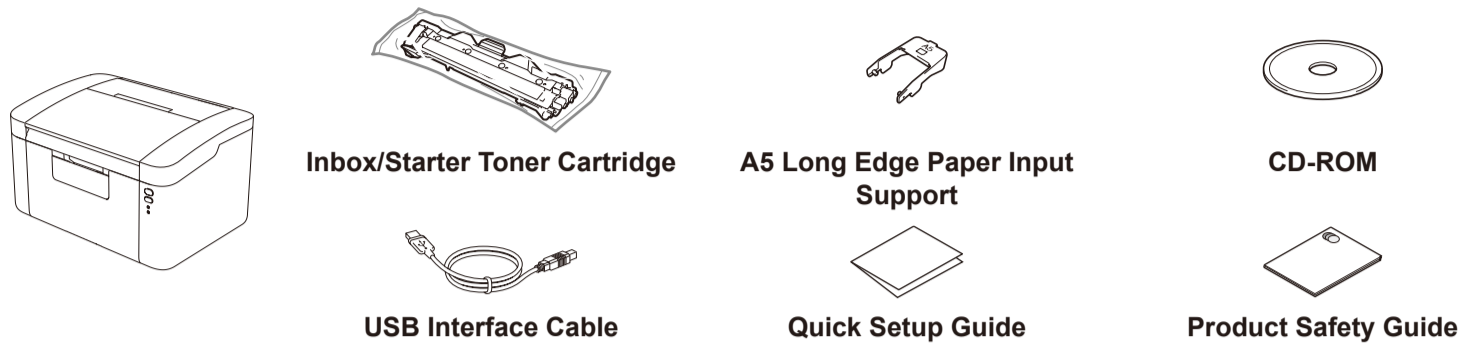

Read the Product Safety Guide first, then read this Quick Setup Guide for the correct installation procedure.

**NOTE:**

**USB cable**


We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres (6 feet) long.

**For Network Machines: Machine Secure Network Access**

Your machine's Administrator default password is on the label on the back of the machine (preceded by "Pwd:").

**Attention:** We strongly recommend you change it immediately to protect your machine from unauthorized access.


## 1 Remove the packing materials and install the toner cartridge

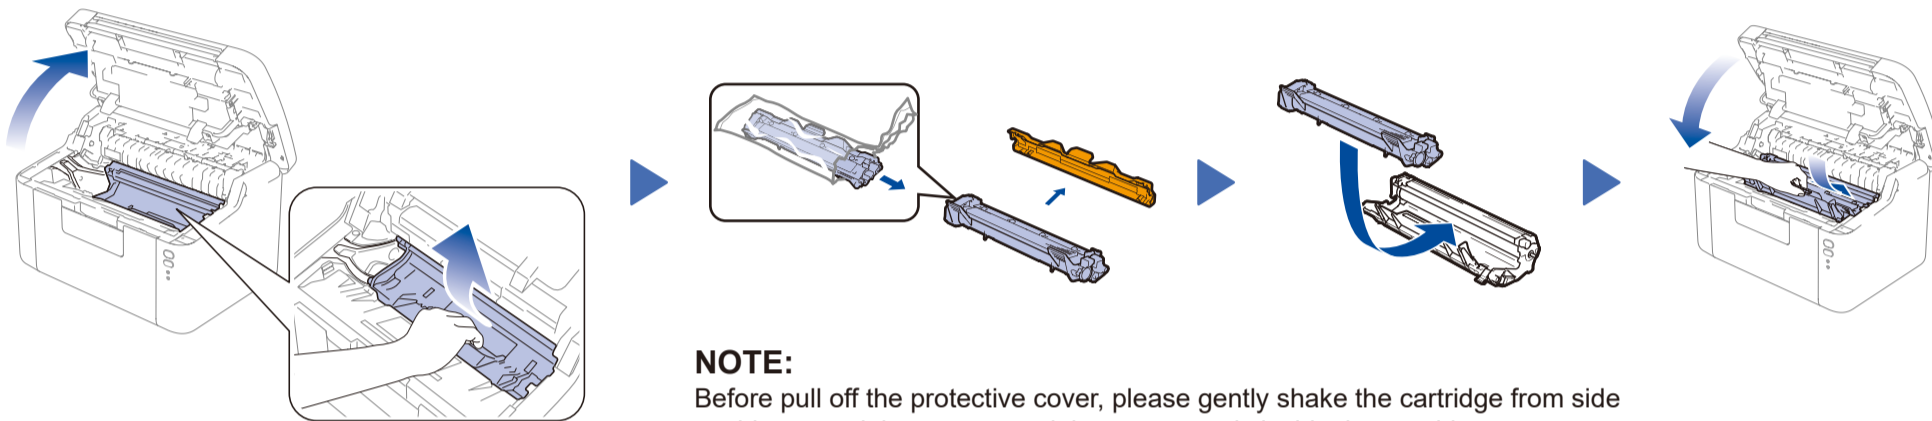

**NOTE:**

Before pull off the protective cover, please gently shake the cartridge from side to side several times to spread the toner evenly inside the cartridge.


## 2 Load paper in the paper tray

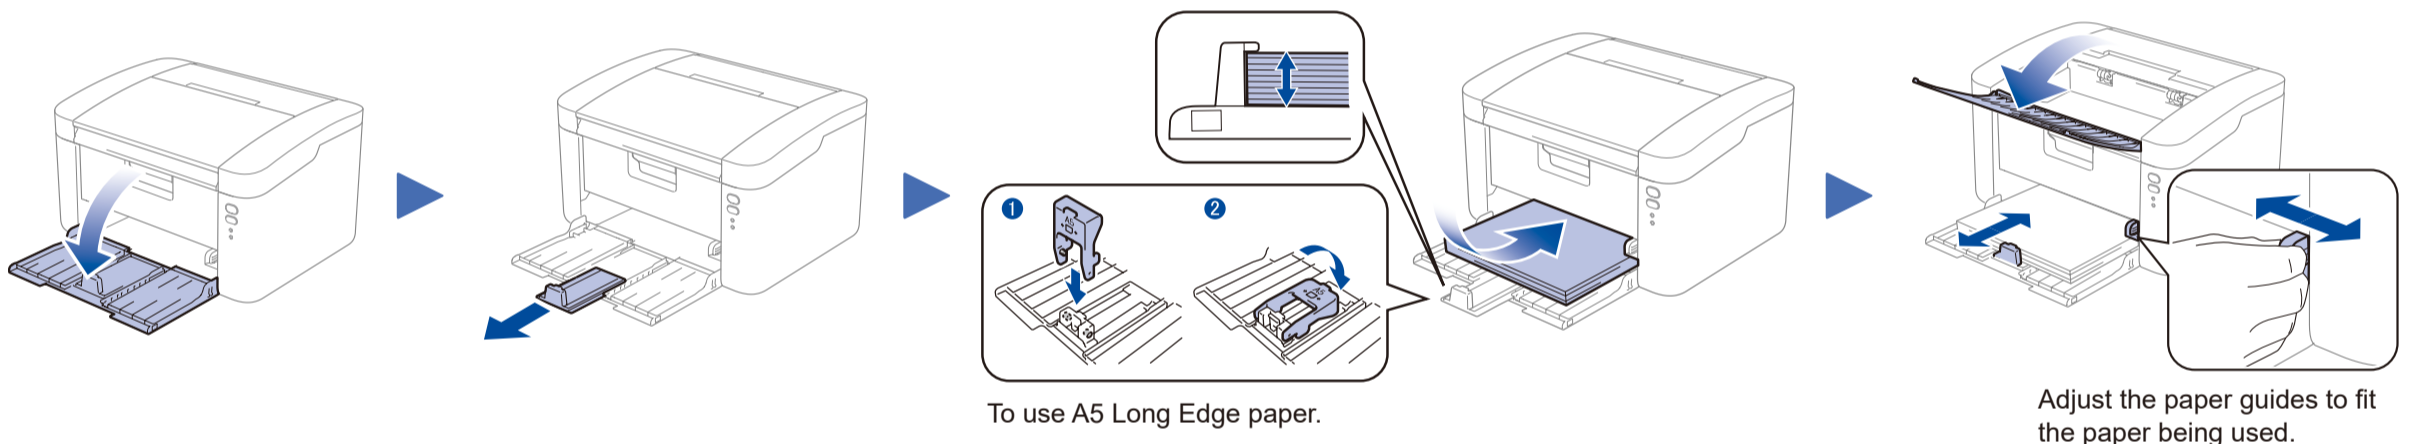

To use A5 Long Edge paper.

Adjust the paper guides to fit the paper being used.

## 3 Connect the power cord and turn on the machine

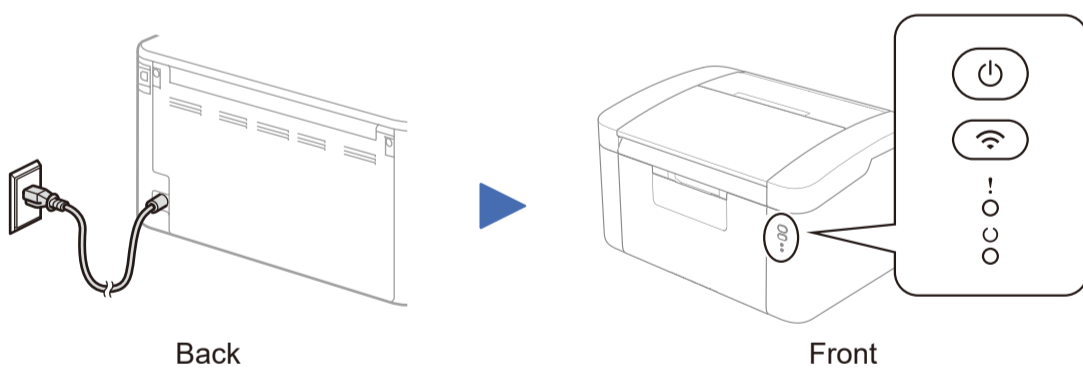

Back

Front

### Printer LED Indications


Blinking: ☀ or 🌱 ON: ● OFF: ○

	POWER OFF	READY	SLEEP DEEP SLEEP	WARMING UP COOLING DOWN	RECEIVING DATA DATA REMAINING	TONER LOW	REPLACE TONER	PAPER JAM	DRUM END SOON REPLACE DRUM
!	○	○	○	○	○	☀ ○	☀ ○	☀ ☀ ○	☀ ☀ ☀ ○
○	○	●	●	🌱	🌱	●	○	○	●
			Dimmed	1 second interval	0.5 second interval				

## 4 Connect the machine to your computer/mobile device


- Windows® PC with a CD-ROM drive, go to step **4A**
- Windows® PC without a CD-ROM drive, go to step **4B**
- Macintosh, go to step **4B**
- Mobile device users with a WPS/AOSS™-supported access point/router, go to step **4C**

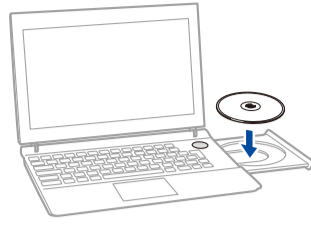

**NOTE:**

If the Lenovo screen does not appear automatically, go to **Computer (My Computer)**.  
(For Windows® 8: click the (File Explorer) icon on the taskbar, and then go to **Computer**.)  
Double-click the CD-ROM icon, and then double-click **start.exe**.

Follow the on-screen instructions until the **Connection Type** screen appears.

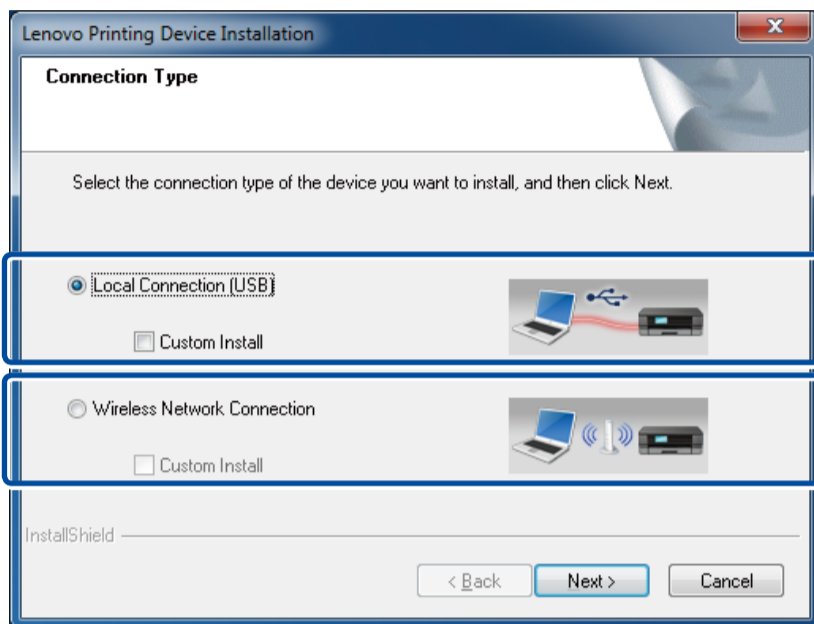**Connection Type**


For USB Connection

For Wireless Network Connection  
We recommend preparing a USB cable to use temporarily during the wireless setup.

Follow the on-screen instructions to continue installation.

**Finish****NOTE:**

If connection is unsuccessful, repeat this step.

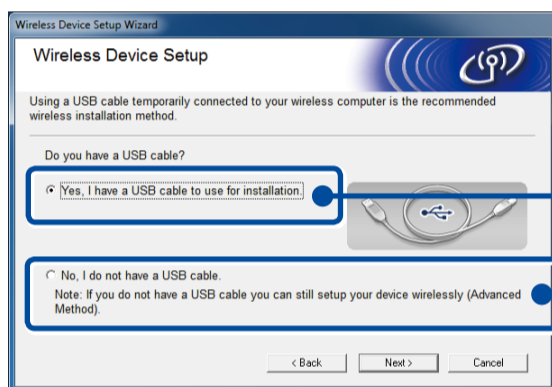**Wireless Network Connection****[Recommended]**

Select this option if you have a USB cable to use temporarily for wireless setup.

Select this option if you do not have a USB cable.

Follow the on-screen instructions to continue installation.

**Finish****NOTE:**

If connection is unsuccessful, repeat this step.




You can download the latest device driver for free from our website, enabling you to use your Lenovo machine as a printer.  
Visit us at <https://www.lenovoimage.com/>.


After you download the driver and software package, follow the on-screen instructions until the **Connection Type** screen appears. Refer to **4A Configuration using the CD-ROM (Windows®)**.



If your wireless LAN access point/router supports automatic wireless (one-push) setup (WPS/AOSS™), you can set up your machine without using a computer.

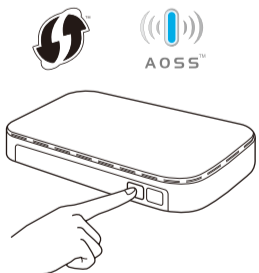

Press the WPS or AOSS™ button on your wireless LAN access point/router.

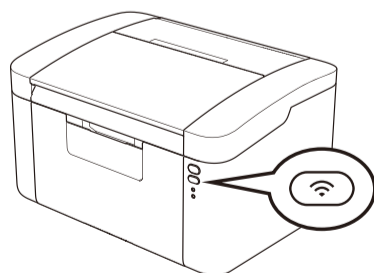

Press and hold the WiFi button on your machine for about 2 seconds. The WiFi button will light up when connected.

Wireless setup is now complete.